




1 Remove the outer box.

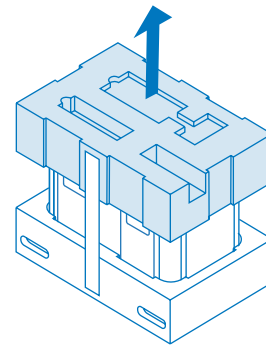


2 Cut the tape, remove the top foam, and unpack accessories.

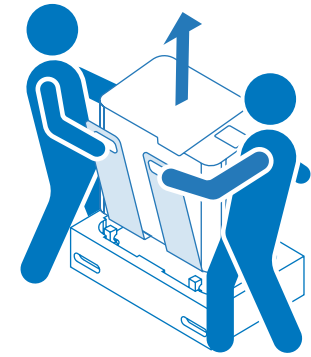


3 Use the cardboard slings to lift the machine off of the base.

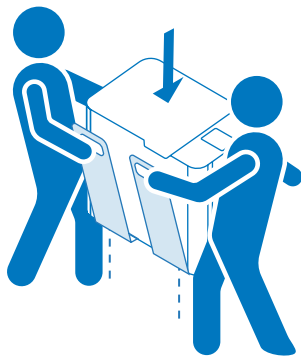


4 Carry machine near final position.

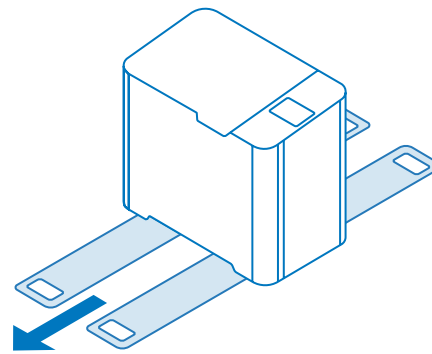


5 Slide the cardboard slings out from under the machine.

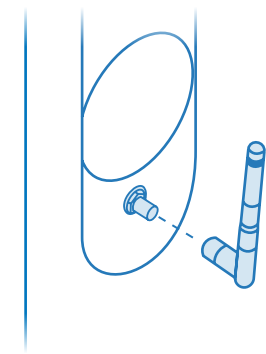


6 Connect wifi antenna.

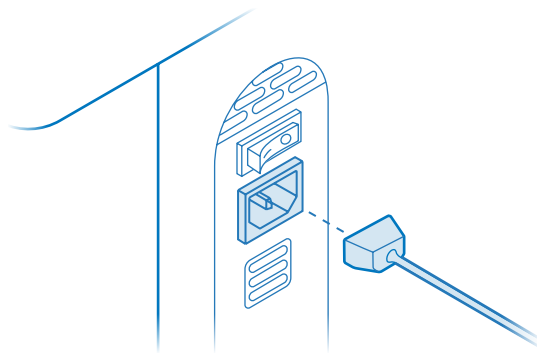

7 Connect the power cable to the machine and an outlet.

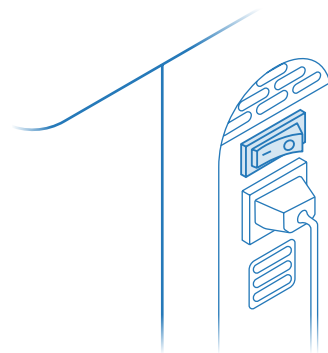

8 Power on the machine.

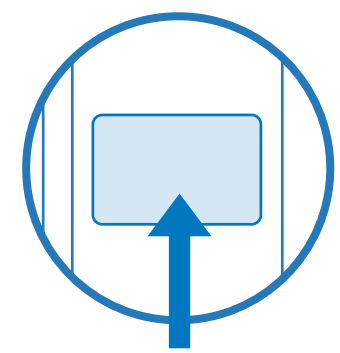

9 Refer to the screen for further instructions.